

INSTRUCTIONS FOR ELIMINATING LIGHT LEAKS FROM XENON TASK LIGHT.

Step 1. Unscrew the two screws of the side panel.





Step 2. Turn the fixture over and unscrew the two screws on the back.





Step 3. Pull the side panel to release the lens, then remove the lens and the side panel.







INSTRUCTIONS FOR ELIMINATING LIGHT LEAKS FROM XENON TASK LIGHT.

Step 4. Insert the new lens and the new side panel.





Step 5. Turn the fixture face down and replace the two screws on the back.





Step 6. Turn the fixture face up and screw in the two screws on the side of the panel.





Repeat the procedure to replace the other side panel.